


# D MINI

BLUETOOTH SPEAKER

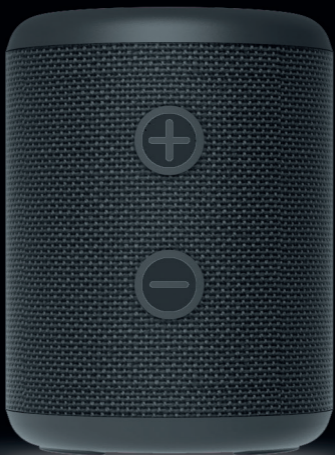

USER MANUAL

DOCKIN

# CONTENT

## GENERAL

Welcome to the DOCKIN family!.....	3
------------------------------------	---

## SAFETY

Reading and storing the user manual.....	4
Explanation of symbols and terms.....	4
Proper use.....	5
Safety Notes .....	6
Checking the package contents.....	9

## OPERATION

Controls.....	10
Turning the D MINI on.....	11
Pairing.....	11
Aux Mode.....	11
Micro SD Mode.....	11
Technical Specifications.....	12
FAQ.....	13
Declaration of conformity .....	14
Manufacturer information and service .....	14
Disposal .....	15
FCC .....	16

# WELCOME TO THE DOCKIN FAMILY!

## About DOCKIN

Honesty and authenticity are at the core of what we believe in. Both are incorporated into our daily work and are therefore an integral part of DOCKIN as a brand and our products.

We meet the challenge of a new, young brand in the rather conservative audio market head on. Being on the frontier of technology, delivering products for a better life and better sound for our entire community — whether it is through our products, our customer service or through reaching out to you in other ways.

## OUR MISSION

We put our passion into audio concepts that enhance your experience of unique sound in your flexible and mobile life – anytime and anywhere! First-class workmanship and a captivating sound are always in the centre of our focus.

## PASSION FOR SOUND

... is more than just flakey marketing speak. Our team consists of people with strong backgrounds in audio and a passion for sound and aesthetics. The love for music, sound and technology unites our team and makes our products unique in the audio landscape.

You can find out more about us on [www.dockin.net!](http://www.dockin.net!)



Spotify:  
**dockin\_de**



Instagram:  
**my\_dockin**



Facebook:  
**/dockinDE**

## READING AND STORING THE USER MANUAL



This user manual for your D MINI Bluetooth® speaker (hereinafter referred to only as "D MINI") contains important information about safety and handling. Therefore, read the user manual carefully before using the D MINI and also store it in a safe place for future reference. If you do not observe the information in the user manual, in particular the safety notes, this may result in damage to property and, in the worst case, even injury to persons. If you pass your D MINI on to someone, make sure to also include this user manual.

This user manual is based on the standards and rules in force in the European Union. When abroad, also be sure to observe the country-specific guidelines and laws.

You can download this user manual as a PDF file at [www.dockin.net](http://www.dockin.net) under **Support**.

## EXPLANATION OF SYMBOLS AND TERMS

Here, you will find a list of the safety-relevant symbols and terms, which are used in this user manual, on the D MINI or on its packaging.



### **WARNING**

This combination of a warning symbol and term indicates a moderate risk, which, if not avoided, may result in death or severe injury.

### **NOTE**

This signal term warns you of potential damage to property.



The GS symbol on the mains adapter stands for tested safety. Products labelled with this symbol meet the requirements of the German Product Safety Act (ProdSG).



This symbol indicates that the wall adapter is a device belonging to protection class II.



Declaration of conformity (see chapter "Declaration of conformity"): This symbol indicates products that fulfil all applicable Community regulations in the European Economic Area.



This symbol certifies that the radiated electromagnetic interference of the device is under the limit approved by the US Federal Communications Commission.



ETL Listed test seal: Products labelled with this symbol meet the requirements of electrical product safety of the United States of America.



The wall adapter may only be used indoors.

## PROPER USE

The D MINI is designed as a speaker for private use. It is not suitable for commercial use. You can connect to a source device of your choice in the following ways: You can connect the source device to the D MINI via Bluetooth® 5.0, EDR, NFC or using an AUX cable.

The D MINI also has a powerbank function, that is, you can also connect suitable external devices to the D MINI and charge them using the integrated rechargeable battery of the D MINI.

The power cable contained in the package contents is designed for charging the D MINI. If you want to charge an external device on the D MINI using the powerbank function, you may, depending on the respective external device, need an additional cable that is not included in the package contents.

Only use the D MINI as described in this user manual. Any other use is deemed improper and may result in damage to property or even injury to persons. The D MINI is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

## SAFETY NOTES



### **WARNING** **Risk of electrical shock!**

Improper handling, incorrect electrical installation or excessive mains voltage may result in an electrical shock.

- Make sure that the mains voltage of the socket corresponds to the specification on the rating plate if you connect the D MINI to it for charging purposes.
- Make sure that the socket that you connect the D MINI to is readily accessible so that you can quickly disconnect the D MINI from the mains supply in the event of a fault.
- Only use the power cable contained in the package contents to charge the D MINI.
- Stop using the D MINI if it exhibits visible damages or if the power cable or its connector plug is defective.
- Do not in any case open the housing of the D MINI. Instead, contact a qualified workshop for repairs. Liability and warranty claims are excluded in the event of repairs performed by yourself, improper connection or incorrect operation.
- Only parts that comply with the original device data may be used for repairs. There are electrical and mechanical parts in the device which are necessary in order to avoid exposure to sources of danger.
- Do not in any case submerge the D MINI and the power cable in water or other liquids.
- Do not use the D MINI in the rain or in wet rooms.
- Make sure that the D MINI and the power cable do not come into contact with open flames and hot surfaces.
- Make sure that the power cable is not kinked and do not lay it over sharp edges.

- Disconnect the D MINI from the power supply once it is fully charged, before you clean the D MINI or if a fault occurs.
- Immediately disconnect any external devices connected to the D MINI if a fault occurs.

## **WARNING**

### **Risk of explosion and fire!**

Improper handling of the D MINI can cause the integrated rechargeable battery to explode or cause a fire.

- Do not subject the D MINI to excessive warmth or heat such as direct sunshine, fire or similar.

Only use the power cable contained in the package contents to charge the D MINI.

## **WARNING**

### **Danger of chemical burns!**

Leaked battery fluid can cause chemical burns if it comes into contact with the skin or other parts of the body.

- If you notice that battery fluid is leaked, be absolutely sure that it does not come into contact with your skin, eyes or mucous membranes. If you have accidentally come into contact with battery fluid, immediately rinse the affected areas with plenty of clean water and promptly contact a physician.
- Be absolutely sure to use protective gloves in the event of a leaked rechargeable battery and remove any battery fluid that has leaked with a dry, absorbent cloth.

## **WARNING**

### **Risks to certain groups of persons!**

- The D MINI may be used by children ages eight and over as well as persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the D MINI and have understood the risks associated with operating it. Children must not play with the D MINI. Cleaning and user maintenance must not be performed by

unsupervised children.

- Make sure that children do not play with the packaging material or the D MINI.



## **WARNING** **Health hazard!**

During operation, the D MINI generates magnetic fields, which can interfere with the functioning of medical devices such as pacemakers. Using the D MINI in certain locations can also result in faults or accidents.

- Always keep a distance of at least 10 cm between the medical device and the D MINI. If necessary, consult your physician if you have any questions.
- Do not use the D MINI in environments where there is a risk of explosion.
- Make sure that you only use the D MINI where wireless transmissions are permitted.



## **WARNING** **Risk of hearing loss!**

Listening at a high volume for prolonged periods poses a risk of hearing loss.

- Avoid listening at a high volume for a prolonged period of time.
- Make sure that you maintain adequate distance to the D MINI and never hold your ear up to one of the speakers.
- Set the volume on the source device to a low level before starting playback on the D MINI. If you set the source device to full volume, very high noise pressure may result, which may not only inflict organic damage, but also have psychological effects. Children and pets are particularly at risk in this respect.

## **NOTICE** **Risk of damage!**

Improper handling can cause damage to the D MINI.

- Do not place the D MINI on or near hot surfaces (stovetops, heaters etc.).



- Do not allow the power cable to come into contact with hot parts.
- Fully recharge the D MINI approximately every six months, even if you are not using the D MINI at all or only irregularly.

## CHECKING THE PACKAGE CONTENTS

Make sure that the package contents are complete and that all parts are undamaged before you commission the D MINI.

1. Take the D MINI and all accessories out of the packaging.
2. Use the following list to check whether the package contents are complete.


The package contents contain the following individual parts:

- D MINI speaker
- USB charging cable
- User manual

3. Check whether the D MINI or the accessories are damaged.

If this is the case, do not use the D MINI. Instead, contact the manufacturer at the service address.

## CONTROLS

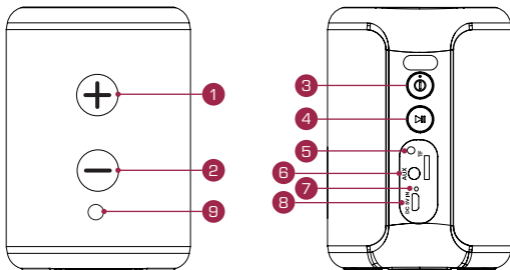

### 1 [+] button

- » Press: Increase volume
- » Press and hold: Next song

### 2 [-] button

- » Press: Decrease volume
- » Press and hold: Previous song

### 3 Power button

- » Press and hold 2s: Power on / off
- » Press: Change audio mode (Bluetooth, SD Card, AUX)

### 4 Play / Pause button

- » Press: Play / pause
- » Press (AUX Mode): Mute / Unmute the speaker
- » Press and hold: Disconnect Bluetooth connection

### 5 Micro SD card slot

- » Insert the micro SD card here

### 6 AUX input for 3.5mm AUX cable

### 7 Charging LED

- » LED red: Speaker is charging
- » LED turns off when fully charged

### 8 Mini USB Charging connector

Battery status will be shown on your playback device in the Bluetooth menu if supported by your device and connected.

### 9 White LED Indicator

- » LED blinking - Bluetooth Pairing mode
- » Slow blinking - Bluetooth Pairing successful
- » LED stays lit - AUX mode
- » Two flashes, then pause - Micro SD mode
- » Slow breathing - Mute active (press Play / Pause button to change mute status in AUX mode)

## TURNING THE D MINI ON

- Hold the "power"-button of your D MINI for 2 seconds to switch it on.

The D MINI automatically connects with the last Bluetooth® source (white LED blinking) or switches to pairing mode if the last source is not available (white LED blinking slowly).

## PAIRING

### Connecting via Bluetooth® function:

1. Activate Bluetooth® on the source device (Bluetooth® settings).
  2. Go to the Bluetooth® settings and scan for discoverable devices.
  3. Select "DOCKIN D MINI" from the Bluetooth® device list.
- After successful pairing, the white LED on your D MINI will blink slowly and you will hear a confirmation sound.

The D MINI will turn off, if no sound is played for 30min to conserve battery.

If you need to change the playback device, you can disconnect the current connection by pressing and holding the "Play / Pause" button. The speaker will enter pairing mode again and you can connect a new device.

## AUX MODE

1. Make sure the speaker is turned on
2. Plug in a 3.5mm AUX cable to the input on the back of the speaker and the other end into your playback device.
3. Adjust the volume of you playback device
4. Press the "+" and "-" buttons on the speaker to adjust system volume.
5. Press the "Play / Pause" button to mute or unmute the speaker

## MICRO SD MODE

1. Make sure the speaker is turned on
2. Plug your Micro SD into the SD port on the back of the speaker. It will automatically change to Micro SD mode.
3. Press the "+" and "-" buttons on the speaker to adjust system

- volume.
- Press and hold the "+" and "-" buttons to change to next / previous song.
  - Press the "Play / Pause" to change playback status.

## TECHNICAL SPECIFICATIONS

Product:	D MINI Bluetooth® speaker
Item number:	15963
Rechargeable battery:	Lithium ion (2,000 mAh)
Music playback time:	Up to 10 hours
Drivers:	2x 45 mm full range drivers 2x 50mm passive radiators
Frequency range:	80Hz-18kHz
Nominal output:	12 W
Protection type:	IPX7
Dimensions:	115 × 86 mm
Weight:	400 g
Connection options for external source devices:	Bluetooth® 5.0, AUX, Micro SD Card (up to 32GB)
Connections present on the D MINI:	USB charging port DC 5 V-1A, 3.5 mm jack plug (AUX), Micro SD Slot
<b>Information about the Bluetooth® function:</b>	
Frequency range:	2.402–2.480 GHz
Transmission power:	0.28 dBm at 3.7V
Formats supported for audio files on Micro SD:	MP3, WAV

## FAQ

### USB Charging

Charging: Connect any DC 5V-1A adapter with the supplied cable. Charging time is approximately 2,5 hours.

### IPX7 Notice

Please make sure that the silicone cover is closed completely before subjecting the speaker to water. It is rated for up to 30min at a depth of 1m.

Only subject the unit to fresh water. Sea water, pool water or similar could damage the unit. Press the "+" and "-" buttons on the speaker to adjust system

### Can not connect

1. Restart the Speaker
2. If passcode is needed enter „0000“

### Connection unstable

1. Stay within 10m between the playback device and the speaker
2. Make sure there are no barriers between playback device and speaker

### Sound distorted

Turn down the volume of the playback device or the speaker.

### No sound when playing

1. Check the volume adjustment on playback device and the speaker
2. Check for pause or mute status

### Speaker does not turn on

Check if the battery is low

### Speaker does not respond

Restart the speaker to reset

## DECLARATION OF CONFORMITY

Stage10 GmbH hereby declares that the D MINI radio system described in this user manual complies with the Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

**[https://support.dockin.de/hc/de/articles/360003225600-EU- Konformitaet](https://support.dockin.de/hc/de/articles/360003225600-EU-Konformitaet)**

## MANUFACTURER INFORMATION AND SERVICE

If you have questions regarding the D MINI or if any problems occur during operation or similar, first contact the following body via e-mail:

**[info@dockin.net](mailto:info@dockin.net)**

DOCKIN is a trademark of

Stage10 GmbH | Torstr. 49 | 10119 Berlin | Germany

## DISPOSAL

### Disposing of the packaging



Dispose of the packaging sorted into single-type materials:

- Paperboard and cardboard for recycled paper
- Films in the recyclable material collection service

### Disposing of the device

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



**Old devices must not be disposed of with household waste!**

If the D MINI is no longer operational, every consumer is **required by law to dispose of used devices separately from household waste**, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical equipment is marked with the symbol shown here.



**Batteries and rechargeable batteries do not belong in the household garbage!**

As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances\* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Bring the D MINI (together with the rechargeable battery) to your collection point and make sure that it is in an uncharged state!

\* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



# DOCKIN

PASSION FOR SOUND

[www.dockin.net](http://www.dockin.net)

